



MOTION PRO, INC.
3171 Swetzer Road
Loomis, CA 95650
Tel 650.594.9600 Fax 650.594.9610
www.motionpro.com

INSTRUCTIONS

MOTION PRO Deluxe Piston Pin Puller P/N 08-0472



1. Remove both piston pin circlips (lock rings).
2. Insert the appropriate piston adapter onto the handle (long skirt adapter or short skirt adapter).
3. Insert the lead screw through the piston pin.
4. Select the largest pin adapter nut that is smaller than the piston pin outside diameter.
5. Thread the adapter nut onto the end of the lead screw (left hand thread).
6. Position the puller body against the side of the piston. Turn the lead screw counter clockwise until the piston pin is removed from the piston.
7. The piston pin may be reinstalled by inserting the lead screw through the piston and pin using the lead screw to pull the pin through.



Shown with **SHORT** skirt adapter



Shown with **LONG** skirt adapter